



USER MANUAL

US Model No: 30448

Thank you for purchasing the Blaux HeatCore desktop ceramic heater. This portable and easy to use heater can be placed in your home, office, or anywhere you please. It's highly energy-efficient and simple to use, just plug it in and enjoy the warmth.

Important Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least a \_3\_ feet (a \_0.9\_ m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 4) Always unplug heater when not in use.
- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair. It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 6) Do not use outdoors.
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate heater where it may fall into a bathtub or other water container.
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Connect to properly outlets only.
- 11) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 12) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 13) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

- 14) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 16) The heater must not be located immediately below a socket-outlet.

CAUTION:

In order to avoid a hazard due to inadvertent resetting of the THERMAL CUT-OUT, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

**Thermal-Protection:** If the heater malfunctions and the internal temperature reaches 250°F/121°C, the thermal fuse will be blown, and the entire heater will not turn on again. Contact customer support and do not modify or take apart the heater by yourself.

**Over-Current Protection:** If the current running through the Heater is above 15A, the circuit fuse will be blown, and the entire heater will not turn on again. Contact customer support and do not modify or take apart the heater by yourself.




WARNING:

- In order to avoid overheating, do not cover the heater.
- This heater is not equipped with a device to control the room temperature.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Turn the main power switch off at the back of the heater to completely switch off the device. Let the heater fully cool down before unplugging the power cord from the power supply.
- If the device has been cleaned, wait until it's completely dry before use.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

SAVE THESE INSTRUCTIONS

Care and Maintenance

To clean, allow your HeatCore to cool completely. Then, wipe the exterior with a soft, damp cloth. Then, let air-dry or dry with a dry, soft cloth.

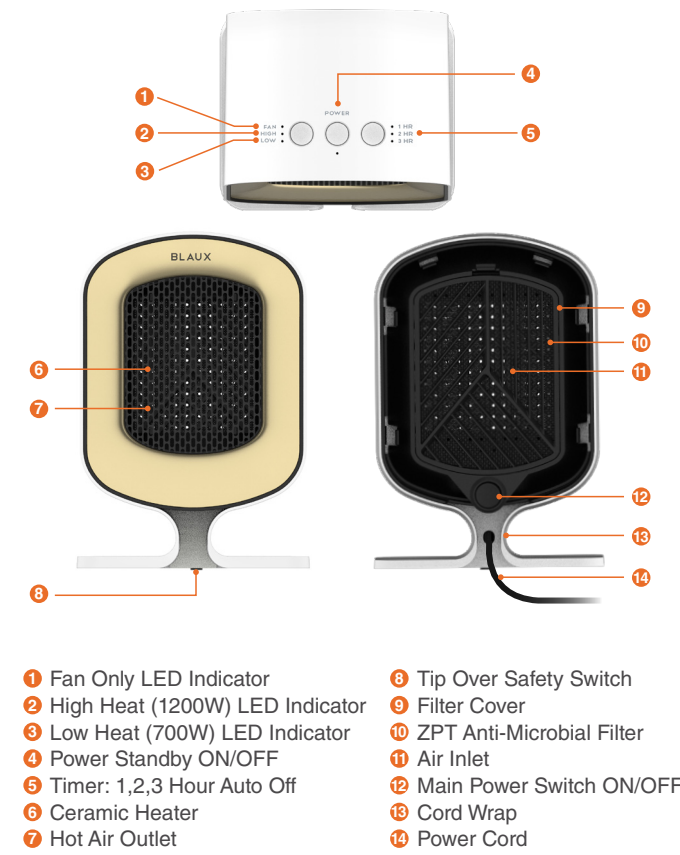

How To Use

1. Plug the power cord into an outlet
2. Power on using the switch at the back
3. Turn on the fan by pressing the power button on top
4. Press the Fan button to the left of the power button to cycle between the different heat modes.
5. Press the Timer button to the right of the power button to set a timer (1/2/3 hr) for the fan. The device will shut itself off when the time expires.

NOTE:

- Tip over safety switch: There's a tack switch on the base of the unit, if there's a tip over the switch will turn off the power of the heater to prevent fire. At this point, the user will need to make sure the heater is sitting on an even and flat surface and turn on the heater again for additional safety reasons.
- Cooldown timer: There's a 30 seconds cooldown timer after the heater has been switched off from HI/LOW fan mode, it's for preventing heat trapping in the heater to increase safety and prevent overheating of the element.



Changing Your Filter

1. Make sure the HeatCore is off, unplugged, and cooled completely
2. Push down on the filter cover tab to unlock the cover
3. Remove the filter cover and take the foam filter out
4. Replace with a new or clean filter
5. Place the filter cover with the bottom first to align the teeth, then push it into the HeatCore to close and lock



Cleaning Your Filter

- Do not wash filter with water or any other liquid as it will degrade the anti-microbial coating
- To clean the filter, use a vacuum cleaner to remove any dust

NOTE:

- The white spots on the filter are normal as they are part of the anti-microbial coating
- When the filter is too full of dust and other particles, we recommend to switch it out with a new filter
- If the old filter is too full of dust and other particles, it will affect the heater's performance

Product Specifications

Rated Voltage: 120V- 50/60Hz  
Watt: 1200W

Have a question or concern?  
Our customer support team is happy to help!

Please visit <https://support.blauxstore.com/> or scan the QR code (to the right) for any urgent inquiries!



**FCC Statement**  
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting administration where the appropriate disposal facility is located.  
Subject to change.