

SAFETY INFORMATION

1. While in operation, keep items away from the spinning propeller blades. Avoid flying the Hajimari towards potentially fragile or sensitive items, including light fixtures, television screens, etc.
2. Do not allow your Hajimari to overcharge. Disconnect the power supply immediately upon completion. Refer to the charging instructions section in this booklet for specific details.
3. The Hajimari Wand accessory (sold separately) contains a small magnet that can be fatal if swallowed. Adult supervision is recommended for young kids. Children 6 and under should not use the Hajimari.
4. The Hajimari contains a permanent battery; do not disassemble the device or allow it to get wet.
5. In case of fire, use sand or a chemical fire extinguisher to put it out.
6. If the Hajimari is hot to the touch, do not charge it. Let it cool down before plugging it in.
7. Avoid dropping from great heights or subjecting the Hajimari to strong impacts. Do not expose to direct sunlight for long periods.
8. Do not charge the battery near flammable materials.
9. Do not charge or store in extremely hot or cold environments.
10. Do not charge or operate the Hajimari if the product is damaged.

Product Description


Thank you for purchasing your own Hajimari by Tesimai!

This fun flying wonder toy provides hours of fun for family and friends. The flexible casing protects the motorized propeller inside to protect nearby objects and people. There are a seemingly unlimited number of tricks you can do with it, but it won't take long to start having fun!

The more you practice, the more fun you'll have! Hajimari promotes concentration, creativity, and friendly competition. Battle boredom with the illuminated Hajimari by Tesimai!

Product features


- 1. Simple operation:** Use your hand to toss or hover and you'll be flying your Hajimari in no time. Activate the device and let it go.
- 2. Engineered for flight:** You can levitate it in the palm of your hand or direct it towards a specific target with precision and ease.
- 3. Designed for Play:** Hajimari stimulates the imagination by encouraging people to create their own challenges and gameplay. It's durable and built for fun.

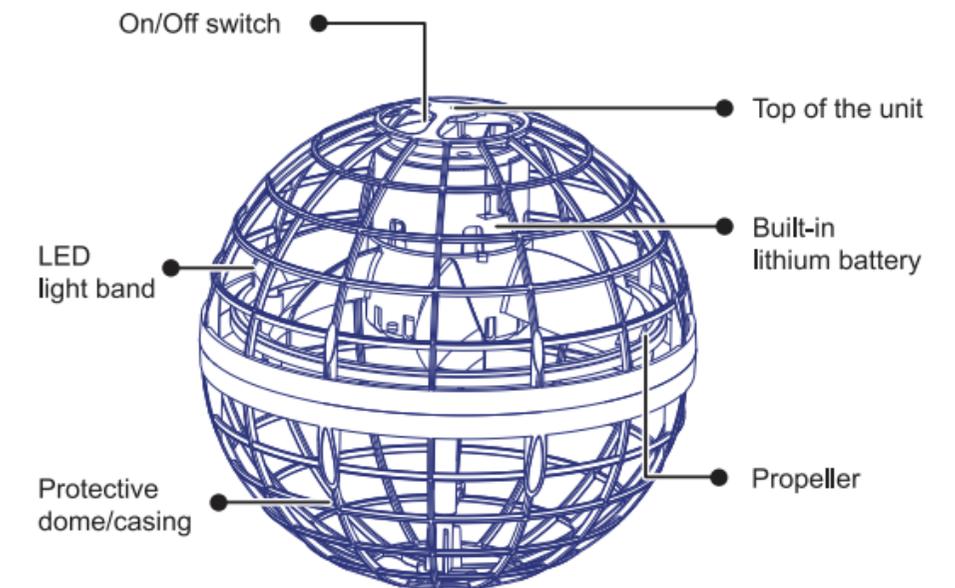

Product Name: Hajimari by Tesimai
SKU Number: 30673
Type Of Battery: Lithium-ion polymer battery
Main Materials: Electronics, PP plastic, built-in lithium battery
Charging Time: About 25 minutes
Playing time: 8-10 minutes
Suitable Age: 6 years of age or above

INSTALLING YOUR OPTIONAL ACCESSORY

Optional Magnetic Dome for use with Hajimari Wand*

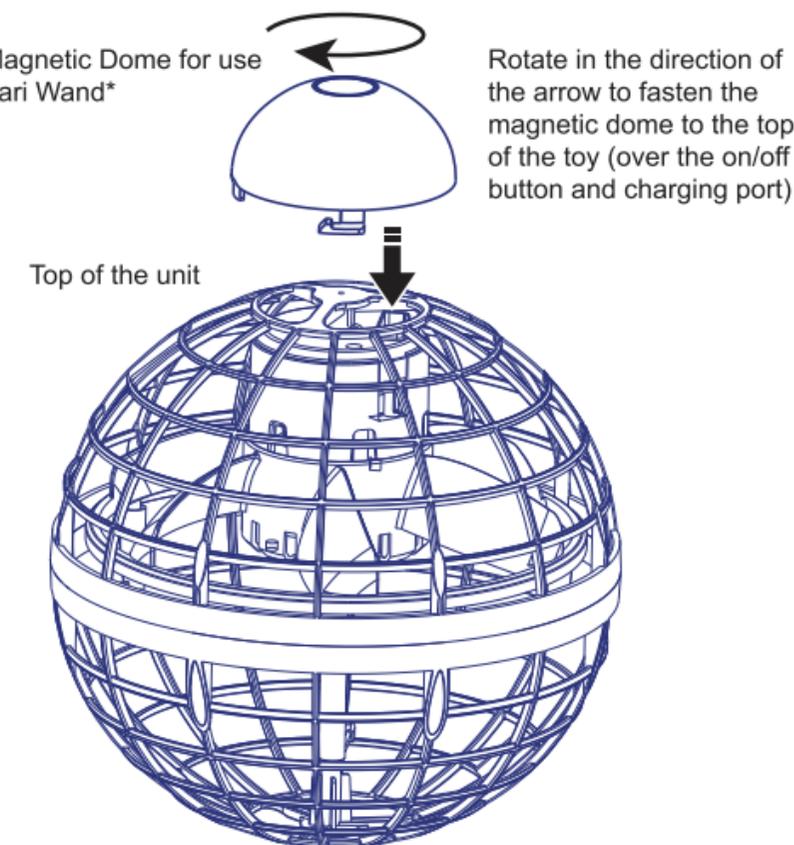

*Hajimari Wand is an optional accessory that is sold separately (Not included)

WHAT'S INCLUDED

- Hajimari x1
- Magnetic dome x1
- USB-A to Micro USB charging cable x1
- Instruction manual x1



TIPS

1. The greater the angle of flying, the faster the speed.
2. Parental supervision is advised.

HAJIMARI[®]

BY TESIMAI[®]

USER MANUAL




Save this manual as it contains important information about the operation of the Hajimari device. Future versions of the product may include modifications to these specifications. The product's appearance may differ slightly from what is shown.

Notice for adults: Review the correct operation of the Hajimari with any children planning to use it.

6+

SETUP GUIDE

Make sure the product is fully charged to maximize your playtime. The Hajimari should only be used in open areas free of any potential hazards.

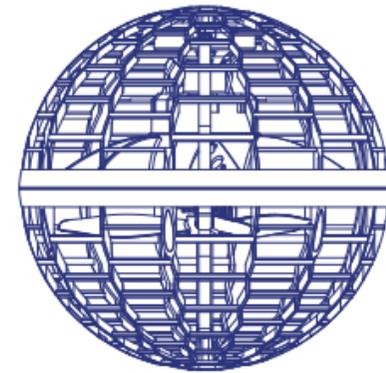


NOTE!

Don't use Hajimari in bad weather. Rain or strong winds could result in damage or physical injury. For electric toys using rechargeable batteries, the batteries should be charged under adult supervision.

TRICKS

1. Turning Your Hajimari On/Off

Switch the Hajimari unit on with your finger and the LED lights will start to flash. Shake the Hajimari in your hand to activate the propeller. Shake it again to stop it from spinning.

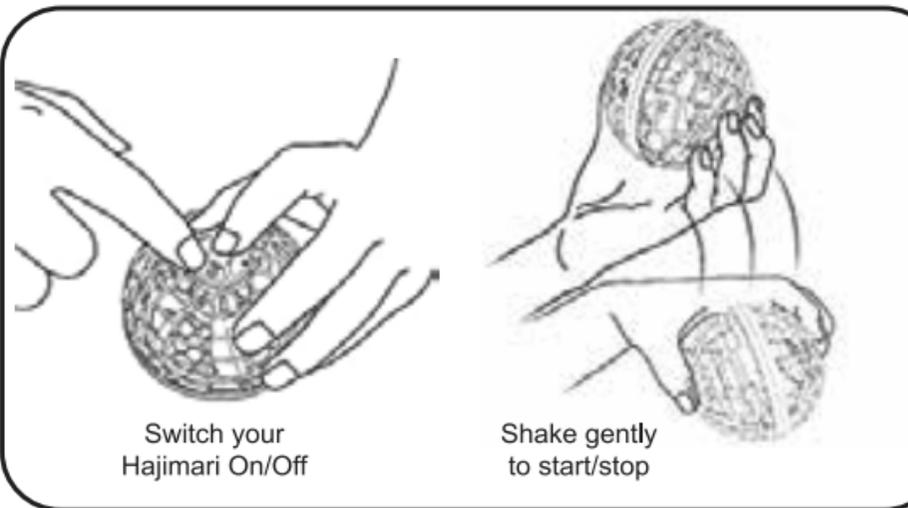


Switch your Hajimari On/Off

Shake gently to start/stop

2. Straight Line Boomerang

Grasp the spinning Hajimari in your hand and tilt the top of the unit back towards you slightly. Thrust the unit away from you into the air at roughly a 15° angle. The Hajimari should fly out and come right back.

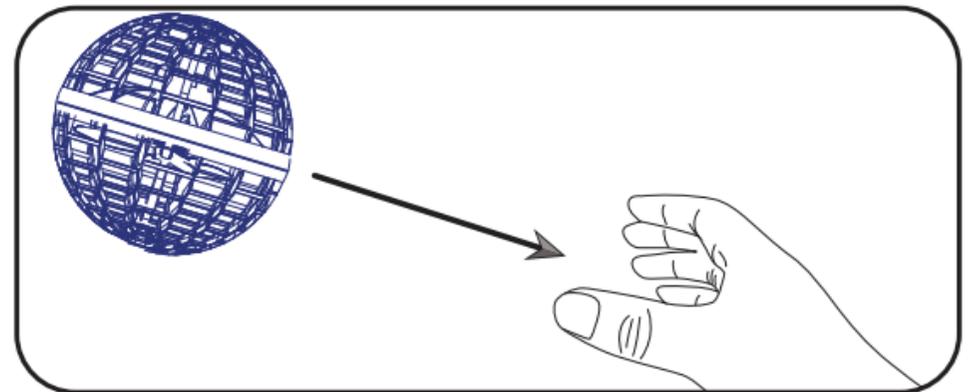


3. Magic Levitation

Release the Hajimari into the air. Position your hand underneath it with your palm facing up. Maintain a small distance (under 2 inches) between the flat of your hand and the bottom of the Hajimari. The device will continue to hover above your palm and follow your movement.




4. Flying Curve

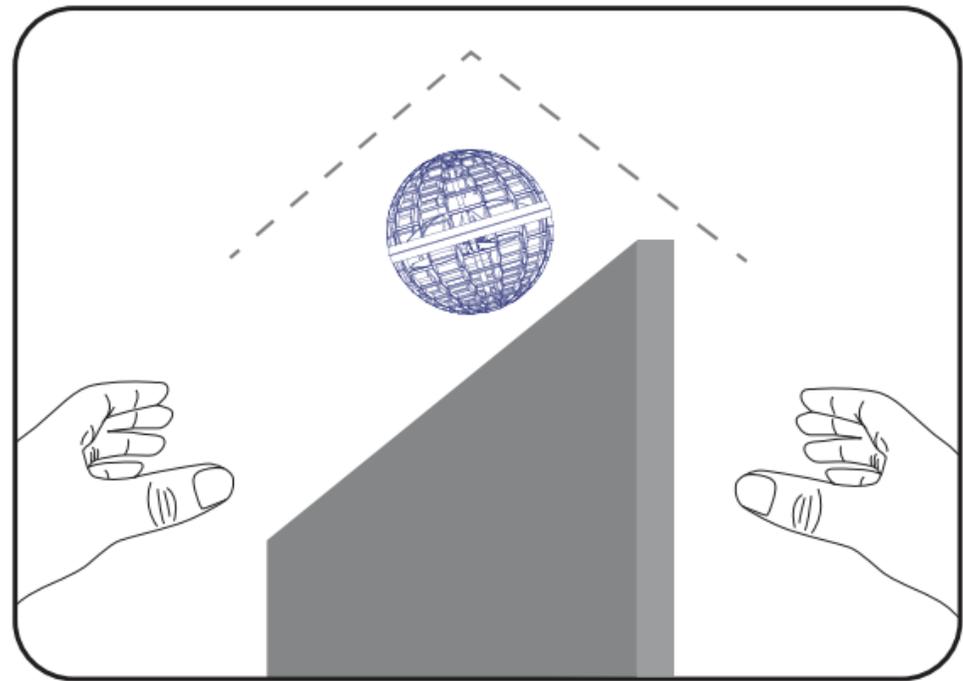

Stand with a vertical obstacle positioned between your hands. Toss the Hajimari ball upward/horizontally towards you from one hand to the other. The whirling Hajimari will magically bypass the object and end up on the other side where it can be caught.


5. Skydive

Hold the spinning Hajimari with your hand and let it go while tilted away from you at a 15° downward angle. The Hajimari will fly away from you and towards the ground.

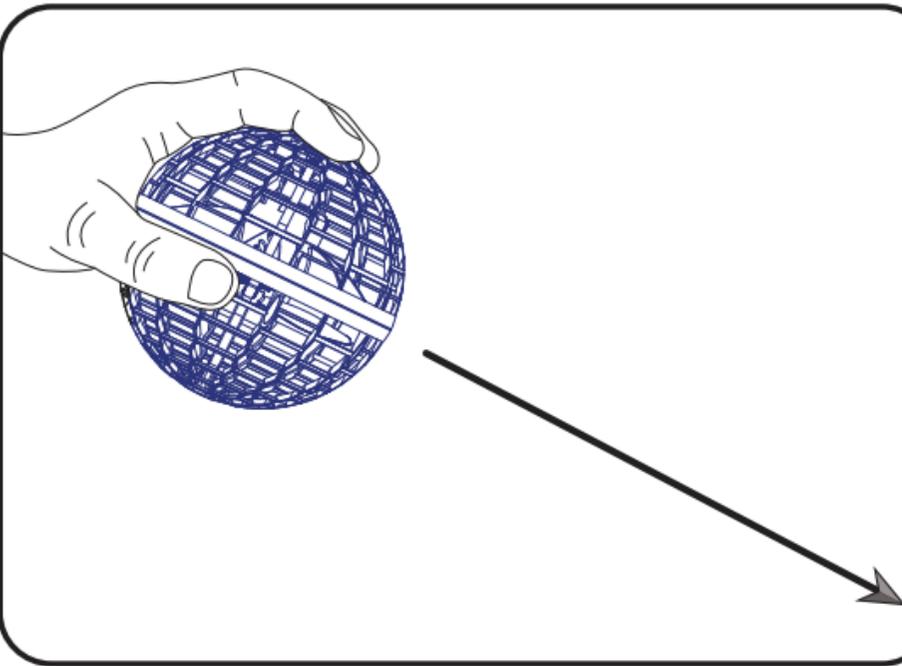

CHARGING INSTRUCTIONS

1. Make sure that the power switch is in the off position and that the product is in a complete stop. Plug the USB charging cable into the charging port of the product.
2. The included USB cable can be connected to any USB connection for charging, like a phone charger or laptop USB port.
3. When charging, a red indicator light will turn on. When fully charged, the indicator light will shut off. Charging should take approximately 25 minutes.

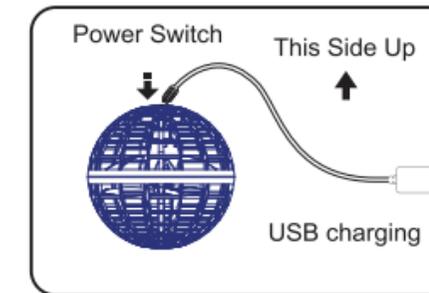

CUSTOMER SERVICE

Thank you for purchasing Hajimari!

If you have any inquiries, please visit:

support.buyhajimari.com

Our customer support team is happy to help!

Scan the QR code for your convenience:



WARNING

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.