

## CUSTOMER SERVICE

Thank you for purchasing Hajimari!  
If you have any inquiries, please visit:

[support.buyhajimari.com](https://support.buyhajimari.com)

Our customer support team is happy to help!  
Scan the QR code below for your convenience:



- Non-rechargeable batteries are not to be recharged.
- For electric toys using rechargeable batteries, the batteries should be charged under adult supervision. For batteries charged using a battery charger for use by children, this instruction may be replaced by: "Batteries are only to be charged by persons of at least 8 years old".
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

**WARNING:** Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


# HAJIMARI WAND

BY TESIMAI®


## USER MANUAL




Thank you for choosing the Hajimari. We hope it brings you countless hours of fun. The following instructions will help you get the most out of your new toy!

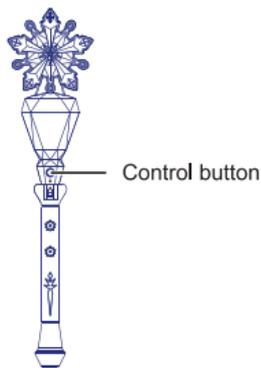

FRONT

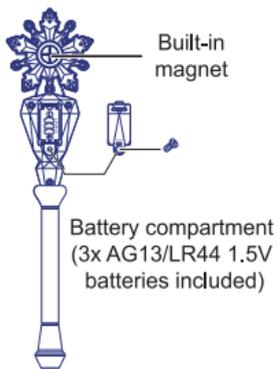

BACK

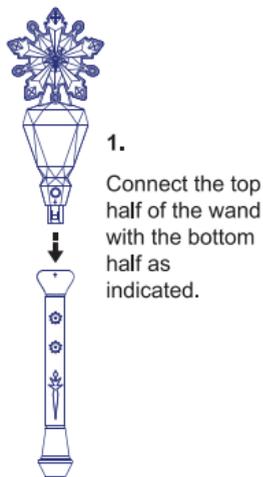

## USING YOUR WAND

With the spinning Hajimari suspended in the air, press the control button on the Hajimari Wand. The floating Hajimari will fly upwards and the LED lights will change. Press the control button again and the Hajimari will continue to rise (up to a maximum height of 49 feet). The color of the LED lights will change each time you press the button. Tap the magnetic end of the wand to the top of the spinning Hajimari and the magnet will hold it in place as it spins.



## TIPS

1. The greater the angle of flying, the faster the speed.
2. Parental supervision is advised.