

WASHWAND+™


SONIC DENTAL DESCALER ACCESSORIES KIT



INSTRUCTION MANUAL

The WashWand+ Sonic Dental Descaler is designed to effortlessly reduce plaque and tartar.

PRODUCT OVERVIEW

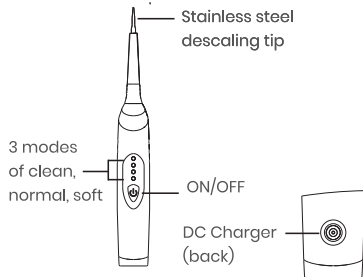

Included

- 1x Sonic dental descaler
- 1x Coaxial to USB A charging cable
- 1x Stainless steel descaling tip
- 1x Instruction manual

Caution: The stainless steel descaling tip is both a choking hazard and a sharp object. Please keep away from children.

Important: The device has an IPX2 water resistance rating. The body of the device should not be submerged under water or held under a running tap.

HOW TO USE

Before using the device for the first time, please make sure it's fully charged (approx. 2 hours).

Charging The Device

1. Connect the power cord to the device and an electrical source.
2. The white light will flash during charging and will remain on when fully charged.

How to Use



- ON:** Short press the ON/OFF button.
- OFF:** Short press the ON/OFF button 2 times.



- Press the button and hold for 2 seconds to choose your desired mode: Clean, Normal, or Soft.



- Clean your teeth.

Switching Tips (Sold Separately)



- Remove the tip from the body by turning it clockwise. Attach your preferred tip (Pointed or Flat) to the body by turning it counterclockwise.

CARING FOR YOUR WASHWAND+ SONIC DENTAL DESCALER

After cleaning your teeth, carefully rinse the Pointed Tip with running water. (The device is IPX2 water resistant, NOT waterproof). Then wipe down the body of the device with a clean cloth.

Features

- 3 speeds (10000/11500/13400VPM)
- Low noise operation 60dB
- Silicone jacketed body, stainless steel tip
- Rechargeable battery 5V - 300mAh
- Up to 3 hours runtime (in lowest setting)
- Coaxial to USB-A charging cable included

Specifications

Rated voltage: 3.7V

Battery capacity: 300mAh

Product size: 223 x 28 x 30 mm

Charging voltage: 5V

Rated current: ≤130mA

Standby current: ≤20uA

Motor noise: ≤60dB

GET IN TOUCH

Need help? Please visit support.shopwashwand.com or scan the QR code below to get in touch with our customer service team. We're always happy to help!



Activate your warranty at shopwashwand.com/warranty-registration.html

