

# DivinAir Mask Fan



## Instruction Manual

### Clean Cool Air Through Your Mask

Easily attaches to almost any face mask and provides refreshing ventilated air.

#### Please Note Before Use:

While the mask fan will attach to most facial masks, it may not fit with preformed masks with a fixed shape. Please test on your mask before use.

#### What's Included:


- Mask Fan
- Replaceable Nano Silver Coated Filter (Pre-installed in mask fan)
- Type-C to Type-C Charging Cable
- Retainer Strap
- Instruction Manual

01



### Charging Your Mask Fan:



Lift the protective silicone cover on the mask fan Type-C charging port. Plug the included charging cable into the mask fan and then connect to a power source. When charging the LED indicator will be solid RED. When fully charged the LED indicator light will be off.

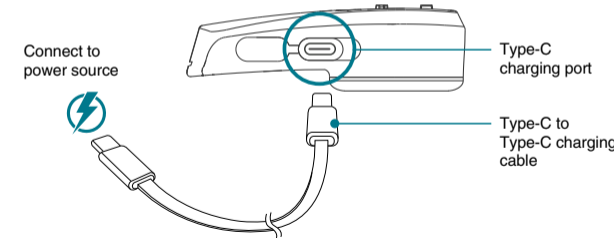

02

### How To Use:

- 1 Use the DivinAir Mask or any other facial mask that will fit with the mask fan. Remove the magnetic mask fan cover ring and place it in the inside of your facial mask (either left or right side). Place the main mask fan outside of the facial mask over the magnetic fan cover ring to clamp between the facial mask fabric. They should magnetically snap to place.
- 2 Long press the power button for 1 second to turn on the fan. With each short press, the fan will change speeds from low, medium to high. Short press will cycle the fan speed and long press for 1 second to turn off the fan. The mask fan will have a memory of the fan speed when turned off. When you turn it back on it will remember the last fan speed you used.

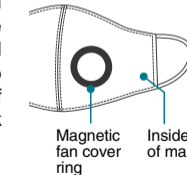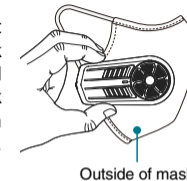

03

- 3 When the fan is turned on, the BLUE LED indicator will be on. The fan can be turned on while charging.
- 4 When the battery is running low, the blue LED light will be blinking.
- 5 Before the battery is completely depleted, the blue LED light will flash 5 times to remind the user to recharge.



04

### Replacing The Filter:


- 1 Power off the mask fan and make sure the fan blade is not moving. Orient the mask fan with the intake filter grill facing upward.
- 2 Turn the intake filter grill counterclockwise to loosen, there should be 3 protruding gripping points to ease with the turning.
- 3 Remove intake filter grill to expose the Nano-Silver filter inside.
- 4 Replace the old Nano-silver filter with the new one. Handle the filter with care to avoid crushing and/or damaging the coating.
- 5 With the new filter installed evenly, insert the filter intake grill by turning clockwise to lock it in place.



05

### Installing Retainer Strap:

- For added security, you can attach the included retainer strap between your mask fan and the ear loop of your facial mask. This will help prevent your mask fan from falling if the mask fan comes loose.
1. Take the included retainer strap and hook the closed loop into the mask fan.
  2. Use the plastic C clip part to hook onto your facial mask ear loop strap.

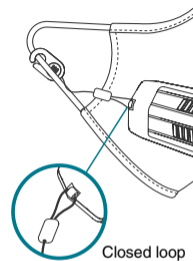

### Specifications:

Type C Charging Port	5V 450mA
Battery Capacity	3.7V / 450mAh (1.665Wh)
Charge Time	1.5 hours
Run Time	Approximately Hi = 2.3 Hr, Med = 3 Hr, Lo = 3.6 Hr
Weight	1.2 oz / 33g

06

### Warning:


- Do not turn on the fan without the intake filter grill.
- Do not put appendages into the fan assembly whether on or off.

### Customer Support:

Please visit <https://support.buydivinAir.com/> or scan the QR code (to the right) for any urgent inquiries!



The device complies with the European Directives 2014/30/EU.



At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting administration where the appropriate disposal facility is located. Subject to change.

07