



BINOCULARS

INSTRUCTION MANUAL



What's included:

1. Binoculars
2. Neck strap
3. Microfiber cloth
4. Instruction manual
5. Warranty slip
6. Lens caps
(1 Rear lens cap, 2 Front lens caps)

Thank you for purchasing StarScope Binoculars!

You're about to see the world in a whole new way! Bring the action up close in breathtaking clarity. Survey your surroundings in vivid detail. StarScope Binoculars enhance any outdoor activity. With proper care, they will provide you with a lifetime of captivating views.

WARNING


Do not disassemble the binoculars for cleaning.
Do not use the binoculars to look directly at the sun.

HOW TO FOCUS FOR USE:

- Adjust the eyecups by twisting them in and out. Non-eyeglass wearers should have the eyecups fully extended. People with glasses should have them twisted in all the way.
- Gently fold the binoculars to accommodate your eye-to-eye width until you get a clear view.
- To focus, twist the center focus and diopter all the way counter-clockwise.
- Close your right eye and adjust the center focus back until the image in your left eye is sharp.
- Do the same with your right eye using only the diopter.

Neck Strap

1. Unthread the strap from the buckle on one end.
2. Insert the loose end through the binocular strap loop.
3. Feed the open end of the strap back up through the bottom of the buckle and out the other side.
4. Repeat these steps for attaching the other end of the strap.

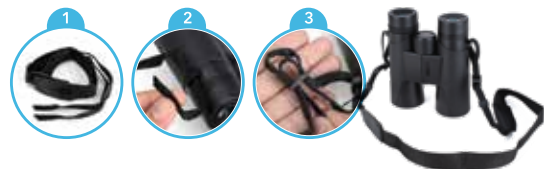

Lens Caps

- The rear lenses are protected by a single cap. Be mindful not to lose it.
- Each front lens has its own cap that is attached to the binoculars.
- Make sure all lenses are capped when the binoculars are not in use.



REAR LENS CAP



FRONT LENS CAPS

Instructions for Care

- Avoid dropping the binoculars on hard surfaces.
- Keep the binoculars stored in a cool, dry location inside its case.
- Do not expose the binoculars to sunlight or extreme heat for extended periods.
- Always double-check the strap to make sure it is secure before use.

Cleaning

- Use a blower or a soft brush to remove dirt and debris from the lens.
- Only use a microfiber lens cloth on lens surfaces.
- Removing smudges may require adding a couple of drops of isopropyl alcohol to the cloth first.
- Never spray liquid directly onto the lens.
- Only use cleaners recommended for coated lenses.
- Avoid using household glass cleaner, dish soap, paper towels, or articles of clothing to wipe the lens as they can damage the surface.

Technical Specifications

Optical Fixed Zoom	10X
Objective Lens Size	42 mm
Field of View	87m / 1000m (285 ft / 1094 yards)
Angle of FOV	5.6°
Max Width	130 mm
Height	55 mm
Length	150 mm
Product Weight	429 g
Water Resistance	IXP5

CUSTOMER SERVICE:

If you have any inquiries, please visit:
<http://https://support.starscopemonocular.com/hc/en-us>
Our customer support team is happy to help!

Scan the QR code for your convenience:

